



INSTALLATION INSTRUCTIONS

S/S BULL BAR FOR GM C/K SERIES 1500 P/U 88-98/BLAZER FULL SIZE 92-94

PART #35-4009/B35-4009

BX

PART LIST:

NO.	NAME	QTY	REMARKS	NO.	NAME	QTY	REMARKS
1	GRILLE GUARD	1		5	FLAT WASHER	16	Φ 12
2	BRACKET	2		6	SPRING WASHER	8	Φ 12
3	BOLT PLATE	4	M 12 *40	7	HEX NUT	8	M12
4	HEX BOLT	8	M12*30				

STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.

STEP 2. NOTE: It may be necessary to remove/relocate front license plate and license plate bracket. It is not required, but strongly recommended. If local/state laws requires a license plate, license plate relocation kit is available.



NOTE: Vehicles without tow hooks see NO TOW HOOK instructions.

STEP 3. From underside of vehicle, remove tow hooks.

STEP 4. Hang bracket into position by partially threading front bolt into existing nut plate. Make sure rear tow hook hole is aligned with nut plate and insert rear tow hook bolt. Hand tighten. SEE FIGURE 2.

STEP 5. Attach Bull Bar to brackets through tow hook opening in lower air dam. Level and adjust Bull Bar as desired.

Torque all fasteners to 65 FT.LBS.

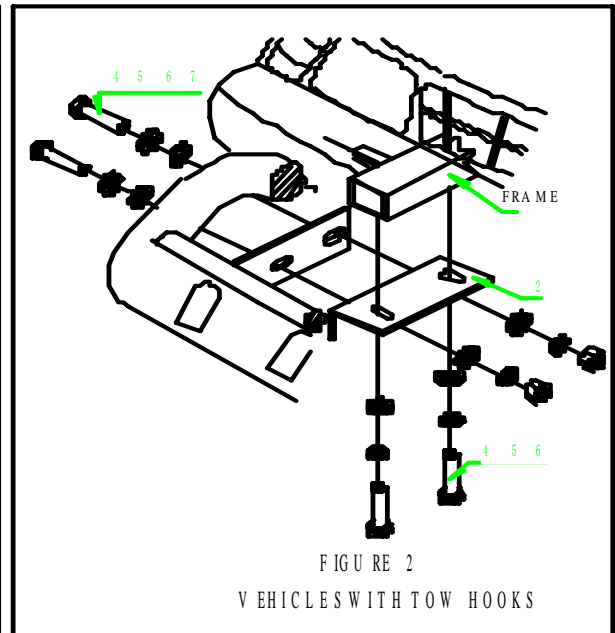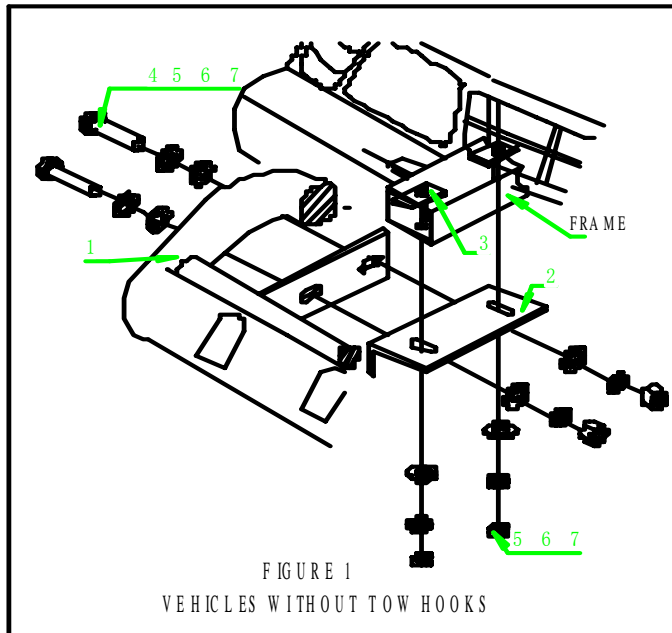

EMARKS

φ 12


φ 12

M12

r before

ut

ole is

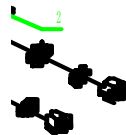

5 6

OKS